


VWW24 Wireless installation Instructions

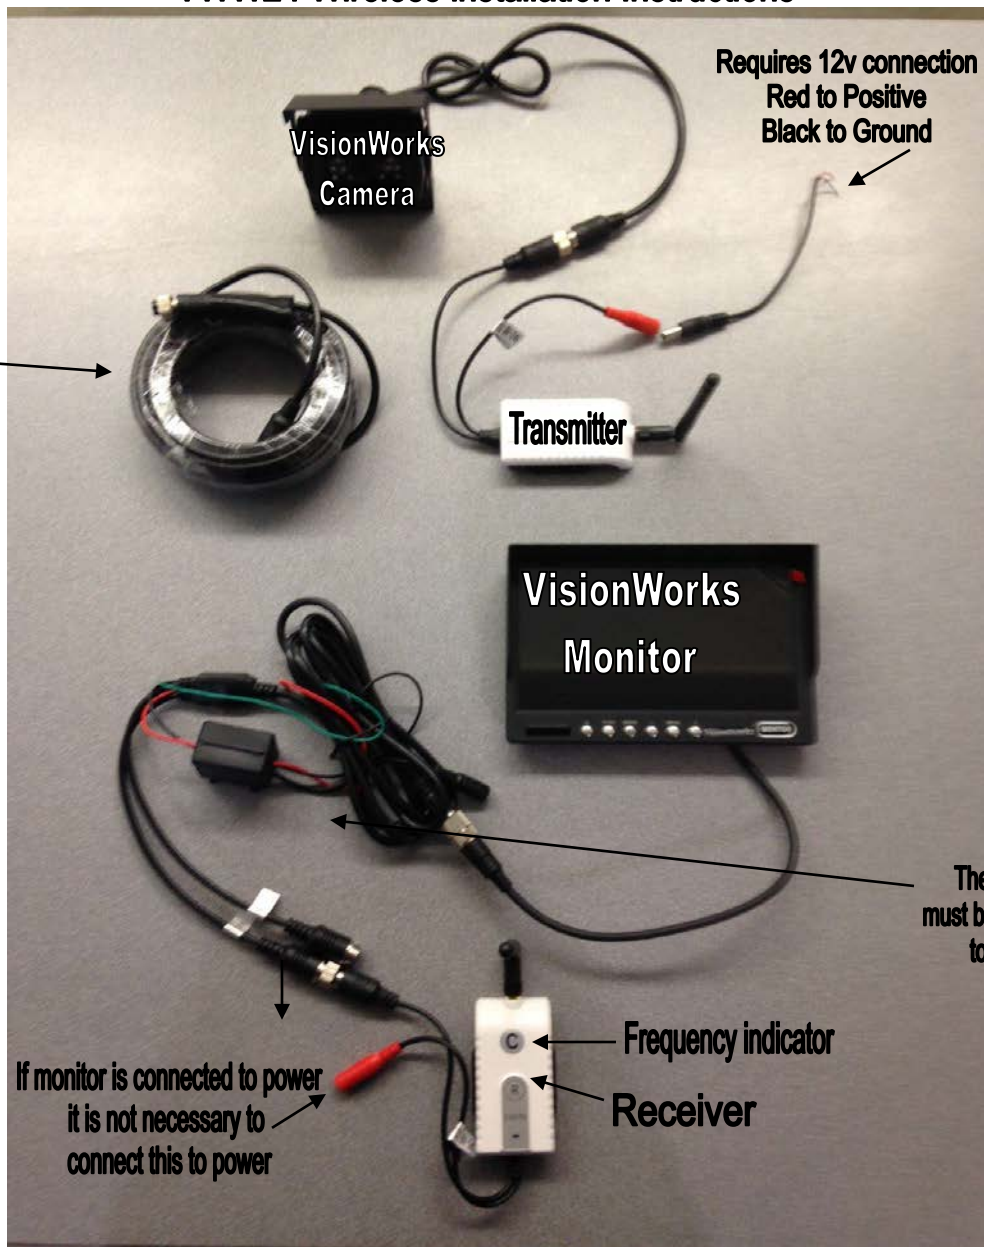

Please note: Transmitters and Receivers come in pairs (A, B, C, and D frequencies). If you are using multiple cameras in the same area please request different frequencies



Connect the following cables and adaptors as shown above. Make sure there is power to the monitor and also to the camera. Place the transmitter in a position where there is a clear line of sight to the receiver. You can also use extension cables on the camera and monitor connections to help gain a line of sight. Please call 800-333-4503 with any questions. Or visit www.visionworkscameras.com

This product does not have a warranty and is not guaranteed to work in every environment. The following situations can cause poor reception:

1. Metal between the transmitter and receiver. (Always create the best line of sight)
2. Microwave signal in the area
3. Wireless Internet transmission in the area
4. Other 2.4 G analog cameras
5. Cordless 2.4 G phones



If you want to use the wireless in a non 12v application and plug into a TV you will need:
2 qty - VWACDC
1 qty - VWRCA4P
Contact your local dealer